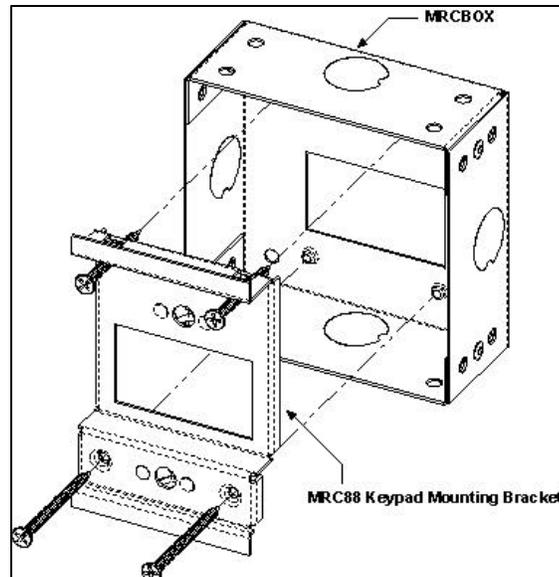


## MRCBox Mounting Instructions:

The MRCBox allows the standard MRC keypad (MRC44 or MRC88) to be mounted in new construction phases (pre-sheetrock) or retro-fit applications where brick or cement walls require an enclosed box for installation.



**Figure: Optional Keypad Back-Box for pre-install applications**

### **MRCBOX (Back-Box) Installation (optional):**

1. Position Back-Box so inner rectangle is in a horizontal position closer to the bottom of the box as shown in the figure above.
2. Affix MRCBOX to Wall Stud at desired height with front of box flush with front of stud (or set back slightly) as to not interfere with Sheetrock.
3. Attach ground wire to ground lug as described in the MRC manual.
4. Orient the Mounting Bracket so the ground lug is on the top portion of the bracket and using two 1.5" (38.1mm) self-tapping drywall screws (or sheet metal screws), mount the bracket to the Back Box.

**Note:** For extra rigidity use two 2" (50.8mm) self-tapping drywall screws (or sheet metal screws) through the bottom two screw holes. Do not over tighten.